




Use & Care Guide

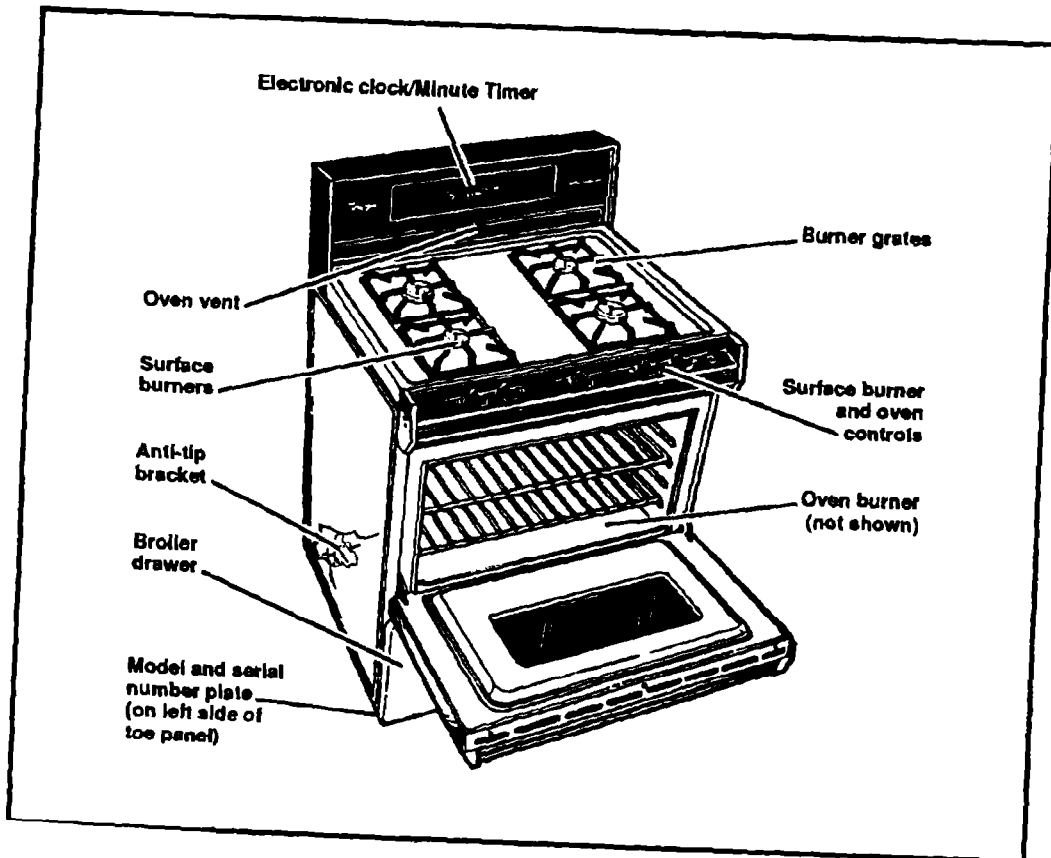

**CONTINUOUS-CLEANING GAS RANGE
SF337PEX (Shown)
STANDARD-CLEANING GAS RANGE
SF317PEX**

Contents

	Page
Important Safety Instructions	3
Using Your Range	6
Using the surface burners	6
Setting the clock	7
Using the Minute Timer	7
Using the oven control	8
Baking/roasting	8
Adjusting the oven temperature control	9
Broiling	10
The oven vent	10
Caring For Your Range	11
Control panel and knobs	11
Surface burner grates	12
Surface burners and caps	13
Removable oven door	14
Using the standard-cleaning oven	14
Using the continuous-cleaning oven	15
Cleaning tips	17
The oven light	18
If You Need Service Or Assistance	19
Whirlpool Cooking Product Warranty	24

©1991 Whirlpool Corporation

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy model and serial numbers from plate (located on left side of toe panel) and purchase date from sales slip.
- Keep this book, the Cooking Guide and sales slip together in a handy place.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

You are responsible for:

- Installing and leveling the range on a floor strong enough to support its weight, and where it is protected from the elements. (See the Installation Instructions.)
- Making sure the range is not used by anyone unable to operate it properly.
- Properly maintaining the range.
- Using the range only for jobs expected of a home range.
- Making sure the range is secured by a properly installed anti-tip bracket.

Important Safety Instructions

Gas ranges have been thoroughly tested for safe and efficient operation. However, as with any appliance, there are specific installation and safety precautions which must be followed to ensure safe and satisfactory operation.

⚠ WARNING

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.

• FOR YOUR SAFETY •

IF YOU SMELL GAS:

- 1. OPEN WINDOWS.**
- 2. DON'T TOUCH ELECTRICAL SWITCHES.**
- 3. EXTINGUISH ANY OPEN FLAMES.**
- 4. IMMEDIATELY CALL YOUR GAS SUPPLIER.**

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO THIS MANUAL. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY, MANUFACTURER (DEALER) OR THE GAS SUPPLIER.

- IMPORTANT -

TO THE INSTALLER: PLEASE LEAVE THIS INSTRUCTION BOOK WITH THE UNIT.

TO THE CONSUMER: PLEASE READ AND KEEP THIS BOOK FOR FUTURE REFERENCE.

Important Safety Instructions Continued

- Install or locate the range only in accordance with the provided Installation Instructions. It is recommended that the range be installed by a qualified installer. The range must be properly connected to the proper gas supply and checked for leaks. The range must also be properly connected to electrical supply and grounded.





- To reduce the risk of tipping of the appliance, the appliance must be secured by a properly installed anti-tip bracket. To check if the bracket is installed properly, shine a flashlight under range toward left rear corner and verify that the anti-tip bracket is engaged. See Installation Instructions for further details.
- Gas fuels and combustion can result in potential exposure to chemicals known to cause cancer or reproductive harm. For example, benzene is a chemical which is a part of the gas supplied to the range. It is consumed in the flame during combustion. However, exposure to a small amount of benzene is possible if a gas leak occurs. Formaldehyde, carbon monoxide and soot are by-products of incomplete combustion. Properly adjusted burners with a bluish rather than a yellow flame will minimize incomplete combustion.
- Do not operate the range if it is not working properly, or if it has been damaged.
- Do not use the range for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Do not attempt to light the oven burner during a power failure. Personal injury could result.
- Use the range only for its intended use as described in this manual.
- Do not wear loose or hanging garments when using the range. They could ignite if they touch a hot surface burner and you could be burned.
- Do not touch surface burners, areas near burners or interior surfaces of oven. Areas near surface burners and interior surfaces of an oven become hot enough to cause burns. During use, do not touch, or let clothing or other flammable materials contact surface burners, areas near surface burners or interior surfaces of oven. Other surfaces of the range may become hot enough to cause burns; such as, the oven vent opening, the surface near the vent opening, the cooktop, the oven door and window.
- Make sure the utensils you use are large enough to contain food and avoid boil-overs and spill-overs. Heavy splattering or spill-overs left on a range can ignite and burn you. Pan size is especially important in deep fat frying.
- Turn pan handles inward, but not over other surface burners. This will help reduce the chance of burns, igniting of flammable materials, and spills due to bumping of the pan.
- Use only dry potholders. Moist or damp potholders on surface burners may result in burns from steam. Do not let potholder touch surface burners. Do not use a towel or bulky cloth for a potholder. It could catch on fire.

- Check to be sure glass cooking utensils are safe for use on the range. Only certain types of glass, glass-ceramic, ceramic, earthenware or other glazed utensils are suitable for ranges without breaking due to the sudden change in temperature.
- Do not use decorative covers or trivets over the surface burners.
- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Grease is flammable and should be handled carefully. Let fat cool before attempting to handle it. Do not allow grease to collect around cooktop or in vents. Wipe spill-overs immediately.
- Do not use water on grease fires. Never pick up a flaming pan. Smother flaming pan on range by covering with a well-fitted lid, cookie sheet or flat tray. Flaming grease outside of pan can be extinguished with baking soda or, if available, a multipurpose dry chemical or foam-type extinguisher.
- Never leave surface burners unattended at high heat settings. A boil-over could result and cause smoking and greasy spill-overs that may ignite.
- Make sure surface burners are off when you are finished, and when you are not watching.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.
- Always position oven rack(s) in desired location while oven is cool.
- Do not store flammable materials on or near the range. They could explode or burn.
- Do not store things children might want above the range. Children could be burned or injured while climbing on it.
- Do not leave children alone or unattended in area where the range is in use. They should never be allowed to sit or stand on any part of the range. They could be burned or injured.
- Never use a match or other flame to look for a gas leak. Explosion and injury could result.
- Know where your main gas shut off valve is located.
- Keep range vents unobstructed.
- Clean your range regularly. See care and cleaning instructions in this manual.
- Be sure all range parts are cool before cleaning.
- Do not clean door heat seal. It is essential for a good seal. Care should be taken not to rub, damage, or move the seal. Clean only parts recommended in this Use and Care Guide.
- Do not use oven cleaners on continuous-cleaning ovens. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- Do not repair or replace any part of the range unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Disconnect the electrical supply before servicing the range.

– SAVE THESE INSTRUCTIONS –

Using Your Range

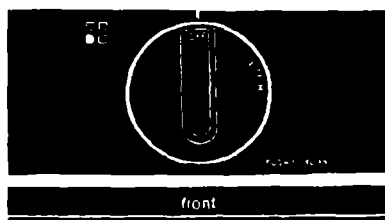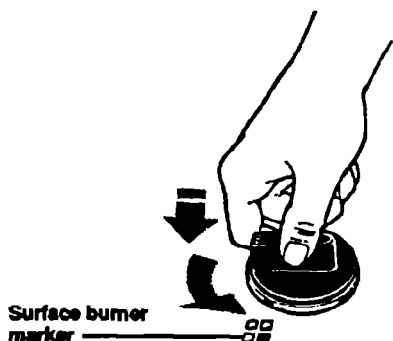

Using the surface burners

Control knobs must be pushed in, then turned to the LITE position. The clicking sound is the ignition sparking.

To stop the clicking sound after the burner lights, turn the control knob back to a desired setting. The control knob can be set anywhere between HI and OFF.

Surface burner markers

The solid dot in the surface burner marker shows which surface burner is turned on by that knob.

Until you get used to the settings, use the following as a guide. For best results, start cooking at the high settings; then turn the control knob down to continue cooking.

Use LITE to light the burner. After the burner lights, turn control back to a desired setting to stop the clicking of the ignition.

Use HI to start foods cooking; to bring liquids to a boil.

Use a medium setting to continue cooking or to fry chicken or pancakes; for gravy, pudding and icing; to cook large amounts of vegetables.

Use a low setting to keep food warm until ready to serve.

NOTE: Do not cook with the control in the LITE position.


In case of a prolonged power failure:

Surface burners can be manually lighted. Hold a lighted match near a burner and turn the control to the LITE position. After the burner lights, turn the control to the desired setting.

⚠ WARNING

Burn, Fire and Explosion Hazard

- Burner flame should not extend beyond the edge of the cooking utensil. The flame can burn you and cause poor cooking results.
- Be sure all control knobs are turned to OFF when you are not cooking. Someone could be burned or a fire could start if a burner is accidentally left ON.
- If the flame should go out while cooking, or if there is a strong gas odor, turn the burners OFF. Wait five minutes for the gas odor to disappear, before relighting burner. If gas odor is still present, see safety note on page 3. Failure to follow these precautions could result in explosion or fire.
- Do not attempt to light the oven burner during a power failure. Personal injury could result.

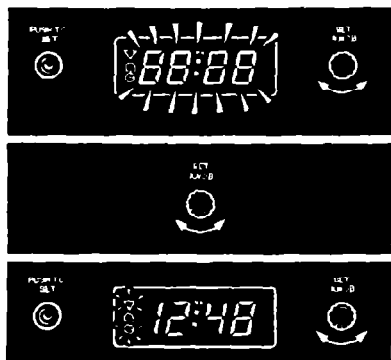

Setting the clock

When the range is connected to power, the clock display will blink at "88:88" until the time-of-day is set.

Turn the Set Knob in either direction to set time-of-day. (Knob must be turned four or five clicks before time will advance.) The inverted triangle and the clock lights will light up on the display while the time is being set.

Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. It can be set in minutes and seconds up to 9 hours 50 minutes. You will hear a tone when the set time is up.

To set the Minute Timer:

1. Push the Set button once. A tone will sound and the inverted triangle and bell lights will light up on the display. The display will show ":00."

2. Turn the Set Knob clockwise to the desired setting, up to 9 hours 50 minutes.

NOTE: The knob must be turned within 15 seconds after the button is pushed.

The inverted triangle light will go off. The Minute Timer will count down the time and sound a tone at the end of the set time. At the end of the countdown ":00" will appear on the display, followed by time-of-day.



NOTE: Once the countdown passes the one-hour mark, the display will show minutes to the left of the colon. For example, 59 minutes will appear as "59:00."

To check time-of-day during a Minute Timer Interval:

Push the Set button once. A tone will sound and the time-of-day will be displayed.

To return to the Minute Timer display:

Push the Set button once. A tone will sound and the Minute Timer will reappear.

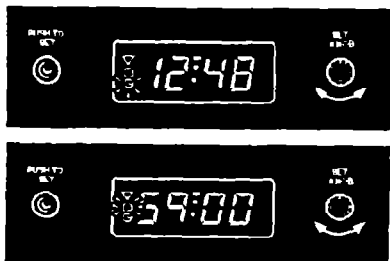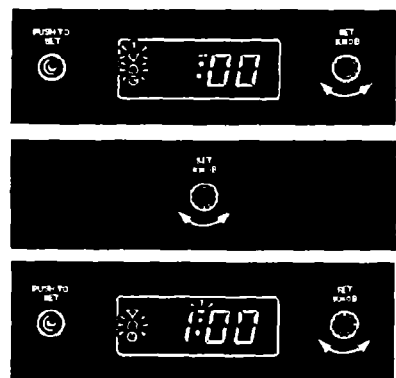

Setting the clock and timer



The clock/timer acts as both a time-of-day clock and as a minute timer.

To set time of day:

When the range is connected to power, the clock display will blink at 88:88 until the time-of-day is set. To set time-of-day, depress the Set Button once. The triangle and clock signal lights on the display will light up and remain lit until the time is set. Within 15 seconds, turn the Clock/Timer Knob to the correct time.

To set the timer:

Turn the Clock/Timer Knob clockwise to the desired setting, up to 9 hours 50 minutes. (Knob must be turned four or five clicks before time will advance.) The triangle and bell signal lights will light up. The timer will count down the time while flashing the time-of-day every 12 seconds. Three beeps will sound at the end of the set time and the signal lights will go off.

To cancel the Minute Timer before the countdown is completed:

Turn the Set Knob to "0:00." If no other time is set within three seconds, the time-of-day will reappear on the display.

Important

Exhibit B

Clock Feature Change

When setting the clock or using the Minute Timer, please use the following instructions instead of those found in your Use and Care Guide.



Setting the clock

When the range is connected to power, the clock display will blink at "88:88" until the time-of-day is set.

1. Push and hold the Set button while turning the Set Knob in either direction to the correct time-of-day.
2. Release the Set button after the time-of-day is set.

Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. It can be set in minutes and seconds up to 60 minutes.

1. Turn the Set Knob clockwise to the desired setting (up to 60 minutes). The Minute Timer will count down and the colon will flash. When the set time is up, a tone will sound.
2. Press the Set button. The tone will stop and the display will show the time-of-day.



To check time-of-day when using Minute Timer:

Push and hold the Set button. The time-of-day will appear.

To return to the Minute Timer display:

Release the Set button. The Minute Timer will continue to count down.

To cancel the Minute Timer before the countdown is completed:

Turn the Set Knob to "0:00". If no other time is set within three seconds, the time-of-day will reappear on the display.

Using Your Range
Continued



To cancel the Minute Timer before the countdown is completed:

Turn the Set Knob to "0:00." If no other time is set within three seconds, the time-of-day will reappear on the display.

Using the oven control

Baking/roasting

1. Position the rack(s) properly before turning on the oven. To change rack position, pull rack out to stop, raise front edge and lift out. When using one rack, the rack should be placed so the top of the food will be centered in the oven. Always leave at least 1 1/2 to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans. For more information, see the Cooking Guide.


2. Push in and turn the Oven Temperature Control to the baking/roasting temperature you want. The oven burner will automatically light in 50-60 seconds.

3. When baking, preheat the oven for 10 minutes. (Preheating is not needed when roasting.) Put food in the oven.

NOTE: Do not place food directly on the oven bottom.

4. During baking/roasting, the oven burner will turn on and off to maintain the temperature setting.

When baking/roasting is done, turn the Oven Temperature Control to OFF.

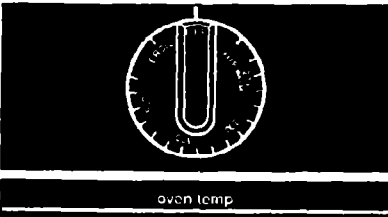


Adjusting the oven temperature control


Does your oven seem hotter or colder than your old oven? The temperature of your old oven may have shifted gradually without you noticing the change. Your new oven is properly adjusted to provide accurate temperatures. But, when compared to your old oven, the new design may give you different results.

If, after using the oven for a period of time, you are not satisfied with the temperature settings, they can be adjusted by following these steps:

1. Turn the Oven Temperature Control Knob to the off position. Pull knob straight off and flip it over.

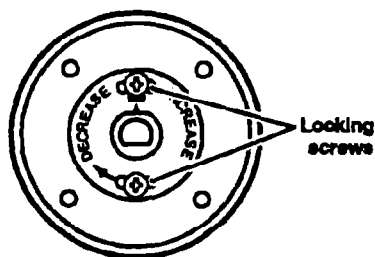

2. Loosen the locking screws. Note the position of the indicator.



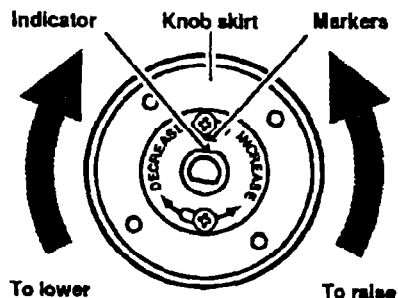


3. To lower the temperature, hold knob handle firmly and turn knob skirt clockwise to move the indicator one marker line to the left. Each line equals about 10°F (5°C).

4. To raise the temperature, hold knob handle firmly and turn knob skirt counterclockwise to move the indicator one marker line to the right. Each line equals about 10°F (5°C).

Tighten the locking screws and replace the control knob.

Using Your Range Continued

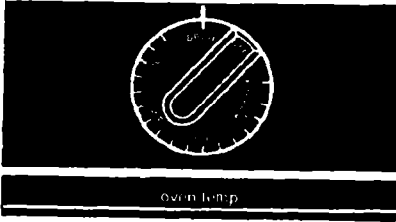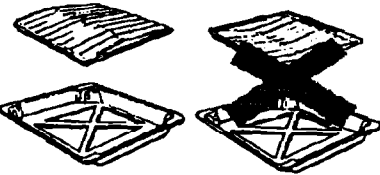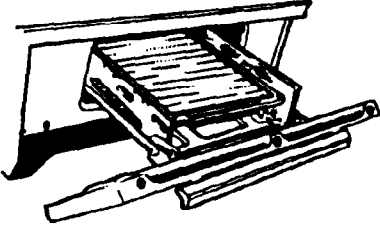


Broiling

The broiler drawer is located below the oven door. **Always broil with the oven door closed.**

1. Pull the broiler drawer open and tilt the door panel down.
2. Place broiler pan grid so grease can drain down sides into lower part of broiler pan. See picture.
3. Before the broiler is turned on, place food on broiler pan and position the broiler pan at one of the three levels. Refer to a reliable cookbook for broiling chart.
4. Push in and turn the Oven Temperature Control to BROIL. The broiler will automatically light in 50-60 seconds.
5. When broiling is done, turn the Oven Temperature Control to OFF.

The oven vent

Hot air and moisture escape from the oven through a vent just under the backguard. The vent is needed for air circulation. **Do not block the vent.** Poor baking/roasting will result.

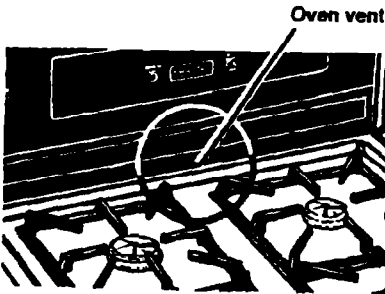

⚠ WARNING

Burn Hazard

When the oven is ON, pans and pan handles left near the oven vent can become hot enough to burn the user and to melt plastics. Use potholders to move pans. Never store plastics, paper or other items that could melt or burn near the oven vent, or any of the surface burners.

Caring For Your Range

⚠ WARNING




Burn, Electrical Shock, Fire and Explosion Hazard

- Make sure all controls are OFF and the range is cool before cleaning.
- Do not use oven cleaners, bleach or rust removers.
- Do not use gasoline or other flammable liquids or vapors to clean this or any other appliance.
- Keep the appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct the flow of combustion and ventilation air.


Failure to follow these guidelines could result in burns, electrical shock, fire or explosion.

Control panel and knobs

1. Make sure all control knobs are turned off.
2. Pull control knobs straight off.
3. Use warm, soapy water or spray glass cleaner and a soft cloth to wipe the control panels. Rinse and wipe dry with a soft cloth.
4. Wash control knobs in warm, soapy water. Rinse well and dry with a soft cloth. Do not soak.

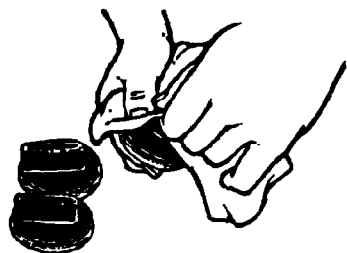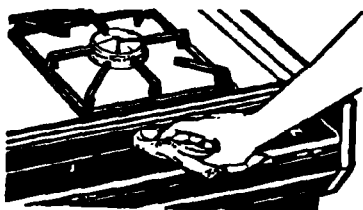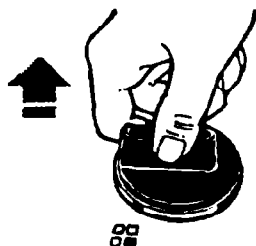

Caring For Your Range Continued

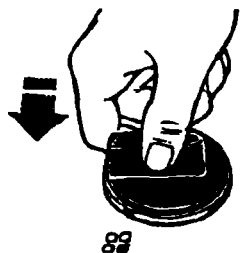


5. Replace control knobs by pushing them firmly into place.


NOTE: When cleaning, never use steel wool, abrasives, or commercial oven cleaners which may damage the finish. After cleaning, make sure all control knobs point to OFF.

Surface burner grates


1. Make sure all surface burners are off and the surrounding parts are cool.

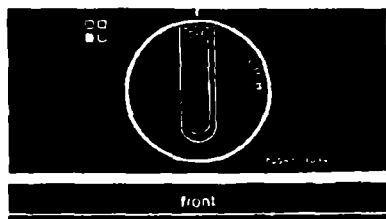


2. Lift off the burner grates.

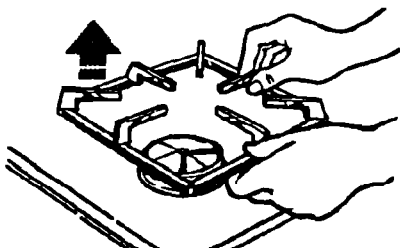


3. Wash the grates with warm, soapy water or in a dishwasher. Use a nonabrasive plastic scouring pad for heavily soiled areas. Rinse and dry well.

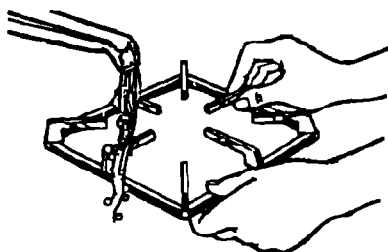

4. Replace burner grates.

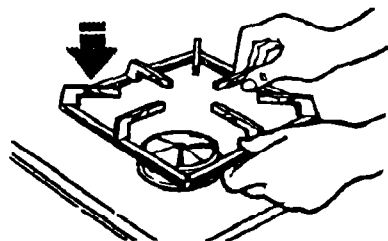

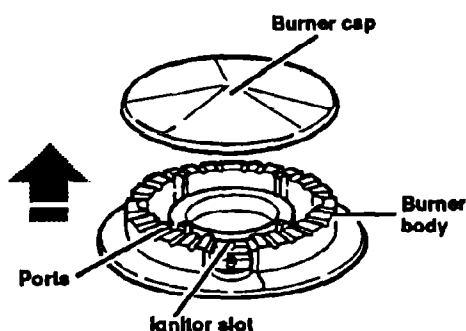

Surface burners and caps

The cooktop and burner box areas are specially designed to make cleaning easier. Since the four burners are sealed, cleanups are easy and convenient.

Cleaning the burners


Always clean the burner caps after a spill-over. Keeping the burner caps clean will prevent improper ignition and an uneven flame. To clean, use warm, soapy water and a soft cloth.

If burner caps must be removed for soaking, follow these steps:

1. Remove the burner grates and burner caps by pulling upward.
2. Soak burner cap in warm, soapy water.
3. After soaking, wipe with a soft cloth or a nonabrasive scrubbing pad or cleanser. Do not clean burner cap in a dishwasher. Rinse and dry well.
4. For proper flow of gas and ignition of the burner, DO NOT ALLOW SPILLS, FOOD, CLEANING AGENTS OR ANY OTHER MATERIAL TO ENTER THE IGNITOR SLOT. If the slot becomes soiled or clogged, use a cotton swab or a soft cloth to clean the area. If needed, use swab or cloth with ammonia, white vinegar or warm water. For cooked-on soil, use a medium- to stiff-bristle tooth brush. DO NOT USE HARD OR SHARP OBJECTS TO CLEAN IGNITOR SLOT. DO NOT USE CLEANING SOLUTIONS.

NOTE: Ignitor slot should remain clean as long as burner cap is seated properly on burner. Occasionally check burner cap to make sure it is level and covers burner completely.


Gas must flow freely through the ignitor slot for the burner to light properly. This area must be free of any soil and be kept protected from boil-overs and spill-overs. ALWAYS keep the burner caps in place whenever a surface burner is in use.

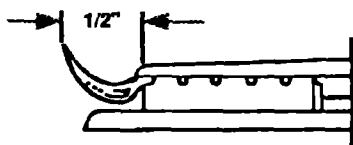

Typical surface burner flame

5. After cleaning the ignitor slot, replace the burner cap and burner grate.
6. Occasionally check the burner flames for proper size and shape as shown. If flames lift off ports, are yellow, or are noisy when turned off, you may need to clean the burners. If ports are clogged, clean with a cotton swab or a soft cloth. If needed, use swab or cloth with ammonia, white vinegar or warm water. For cooked-on soil, use a medium- to stiff-bristle tooth brush, brushing out away from center of burner. If adjustment is needed, call a qualified technician for service.

Caring For Your Range Continued

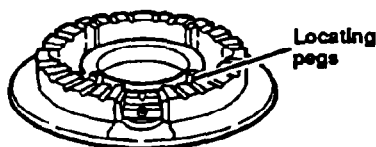


7. To replace burner cap, make sure cap is properly aligned and leveled. Make sure that the locating pegs in the burner body fit into the recess in the underside of the cap. The cap must be correctly seated on the burner body for proper operation of the burner.
8. Turn the burner on to determine if it will light. If the burner does not light after cleaning, contact an authorized WhirlpoolSM service technician. Do not service the sealed burner yourself.

Removable oven door

Removing the oven door will help make it easier to clean the oven.

⚠ WARNING

Burn and Electrical Shock Hazard
Make sure all controls are OFF and the oven is cool before removing oven door. Failure to do so can result in burns or electrical shock.

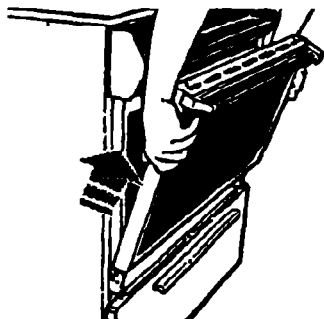

1. Open the door to the first stop position.
2. Hold the door at both sides and lift it at the same angle it is in.
3. To replace, fit the bottom corners of the door over the ends of the hinges.
Push the door down evenly. The door will close only when it is on the hinges correctly.

Using the standard-cleaning oven (Model SF317PEX)

The standard-cleaning oven has to be hand-cleaned. Use warm, soapy water, soapy steel wool pads or a commercial oven cleaner. See "Cleaning tips" on page 17 for further instructions.


⚠ CAUTION

Product Damage Hazard
Do not allow commercial oven cleaner to contact the heat seal, thermostat or exterior surfaces of the oven. Damage will occur.

Use foil during cooking to keep oven clean. See "Using foil" on page 16 for more information.


Fat spatter beads up.
Turns black.

Standard
porcelain

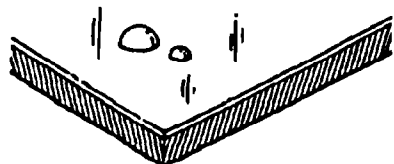

Fat spatter
spreads out.
Burns away.

Continuous-
cleaning
porcelain

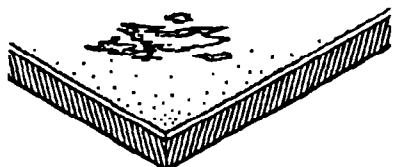

Using the continuous-cleaning oven (Model SF337PEX)

Standard-cleaning oven walls are coated with smooth porcelain. Your continuous-cleaning oven walls are coated with a special, rougher porcelain. A fat spatter beads up on the smooth surface, but spreads out on the rougher surface. The bead of fat on the smooth surface chars and turns black. The spread-out fat on the rough surface gradually burns away at medium to high baking temperatures so the oven can return to a presentably clean condition.

Cleaning tips



1. The oven window and racks are not coated. Clean them by hand.
2. The oven door does not get as hot as the walls. Some hand-cleaning may be needed.
3. If you do more broiling than baking, hand-cleaning may be needed.
4. Use aluminum foil or a shallow pan on the lower rack according to instructions. Spillovers may not burn away and could stain the bottom.

Hand-cleaning

⚠ WARNING



Personal Injury Hazard

Do not use oven cleaning products in a continuous-cleaning oven. Some can become trapped in the porcelain surface and give off harmful fumes.

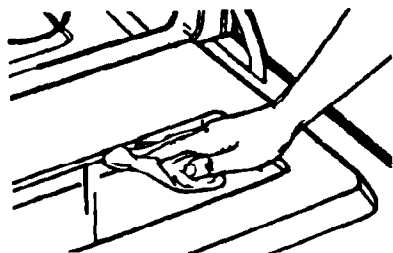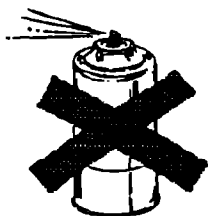

WINDOW—Keep clean with warm, soapy water or spray glass cleaner. Use a plastic scouring pad for heavily soiled areas. Rinse well. Do not use steel wool or abrasive cleansers.

Caring For Your Range
Continued

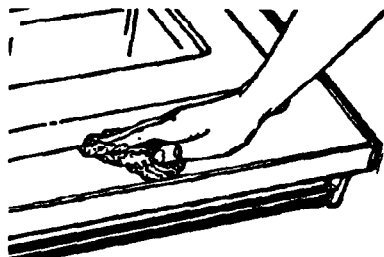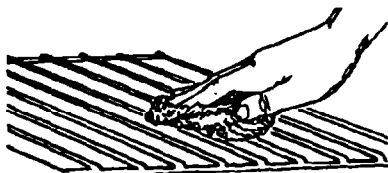

RACKS—Use a soapy steel wool pad for best cleaning results. Rinse well.

WALLS AND DOOR—Wash with warm, soapy water. Use a steel wool pad or plastic scouring pad for heavily soiled areas. Rinse well.

Using foil (standard and continuous-cleaning ovens)

To catch sugar or starchy spills from pies and casseroles, use a piece of heavy-duty aluminum foil or a shallow pan on the lower rack, slightly larger than the cooking container.

⚠ WARNING

Burn, Electrical Shock and Product Damage Hazard

- Make sure all controls are OFF and the oven is cool before using foil. Failure to do so can result in burns or electrical shock.
- Do not use foil to cover oven floor or to completely cover a rack. Good air circulation is needed for the oven to operate properly. Poor cooking results and damage to the oven could occur.

1. Turn off all controls.
2. Put foil or pan under the cooking container. Make sure the foil is centered and large enough to catch any spill-overs.

Cleaning tips

Control knobs

Clean with warm, soapy water and a soft cloth.

- Wash, rinse and dry well.
- Do not soak.

Control panels

Clean with warm, soapy water or spray glass cleaner and a soft cloth.

- Wash, rinse and dry well.
- Follow directions provided with the cleaner.

Exterior surfaces (other than control panels)

Clean with warm, soapy water and a soft cloth.

- Wipe off regularly when cooktop and oven are cool.

Use a nonabrasive plastic scrubbing pad for heavily soiled areas.

- Do not use abrasive or harsh cleaners.

NOTE: Do not allow food containing acids (such as vinegar, tomato or lemon juice) to remain on surface. Acids may remove the glossy finish.

Also, wipe up milk or egg spills when cooktop is cool. Be careful when cleaning around model and serial number plate; the numbers wipe off easily.

Surface burners, grates and caps

See pages 12 and 13 for cleaning instructions.

Broiler pan and grid

Clean with warm, soapy water or a soapy steel wool pad.

- Clean after each use.
- Wash, rinse and dry well.

Oven racks

Clean with warm, soapy water or soapy steel wool pads.

- Wash, rinse and dry. Use soapy steel wool pads for heavily soiled areas.

Oven door glass

Use spray glass cleaner or warm, soapy water and a nonabrasive plastic scrubbing pad.

- Make sure oven is cool.
- Follow directions provided with the cleaner.
- Wash, rinse and dry well.

Standard-cleaning oven

Clean with warm, soapy water or soapy steel wool pads.

- Make sure oven is cool.
- Remove door for easier access.
- Clean heavily soiled areas or stains. Rinse well with water.

OR

Use commercial oven cleaners.

- Remove door for easier access.
- Place newspaper on floor to protect floor surface.
- Follow directions provided with the oven cleaner.
- Rinse well with clear water.
- Use in well-ventilated room.
- Do not allow commercial oven cleaners to contact the heat seal, thermostat or exterior surfaces of the range. Damage will occur.

Place piece of heavy-duty aluminum foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spill-overs.

Continuous-cleaning oven

Clean with warm, soapy water or a soapy steel wool pad.

- Make sure oven is cool.
- Remove door for easier access.
- Clean heavily soiled areas or stains. Rinse well with water.

Place piece of heavy-duty aluminum foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spill-overs.

- Do not use commercial oven cleaners.
- Most fat splatters on oven walls and floor will gradually reduce to a presentably clean condition during baking.

The oven light

The oven light will come on when you push the Oven Light Switch on the control panel. Push the switch again to turn off the light.


⚠ WARNING

Electrical Shock and Personal Injury Hazard

- Make sure oven and light bulb are cool and power to the oven has been turned off before replacing the light bulb. Failure to do so could result in electrical shock or burns.
- Be careful not to drop the bulb. Broken glass could cause injury.

To replace the oven light:

1. Unplug appliance or disconnect at the main power supply.
2. Remove the light bulb from its socket. Replace with a 40-watt appliance bulb. Plug in appliance or reconnect at the main power supply.

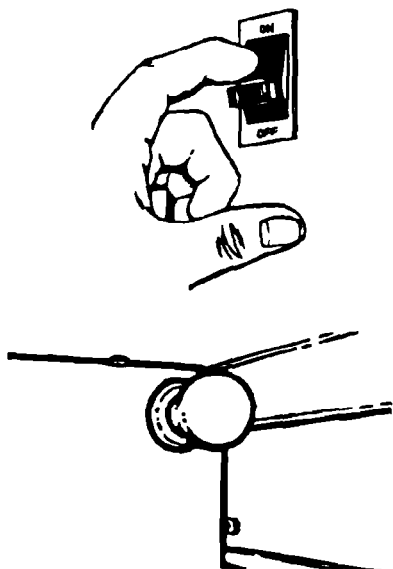

If You Need Service Or Assistance...

We suggest you follow these steps:

1. Before calling for assistance ...

Performance problems often result from little things you can find and fix without tools of any kind.

If nothing operates:

- Is the gas turned on?
- Is the power supply cord plugged into a live circuit with the proper voltage? (See Installation Instructions.)
- Have you checked your home's main fuses or circuit breaker box?
- Have instructions in this book been followed?
- Is the control knob set in the correct position?
- Is the flow of combustion and/or ventilation air to the unit obstructed? Do not obstruct airflow to and around unit.
- Recheck suspected defect.

If burner fails to light:

- Is the range connected to electrical power?
- Have you checked your home's main fuses or circuit breaker box?
- Are burner ports clogged? See page 13.

If burner flames are uneven:

- Are burner ports clogged? See page 13.

If burner flames lift off ports, are yellow, or are noisy when turned off:

- The air/gas mixture may be incorrect. (Call for service.)

If burner makes a popping noise when ON:

- Is the burner wet from washing? Let dry.

If control knob(s) will not turn:

- Did you push in before trying to turn?

If soil is visible on continuous-cleaning oven finish:

- The special finish is designed to gradually reduce oven soil during normal baking or roasting. It is not designed to keep your oven spotless, only presentably clean. If you broil often, you may see oven soil. Follow hand-cleaning tips on pages 15 and 16.
- The door is cooler than the oven walls. Soil will be more visible on the door than other areas in the oven. See hand-cleaning tips on pages 15 and 16.
- Sugar and starchy spills may leave stains. See pages 15 and 16 for hand-cleaning tips. Use foil on lower rack to catch these spills.

If cooking results are not what you expected:

- Is the range level?
- Does the oven temperature seem too low or too high? See page 9.
- If needed, have you preheated the oven as the recipe calls for?
- Does the flame size fit the cooking utensil being used? (See the Cooking Guide.)
- Are you following a tested recipe from a reliable source?
- Are you using pans recommended in the Cooking Guide?
- If baking, have you allowed 1 1/2 to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Are the pans the size called for in the recipe?
- Do the cooking utensils have smooth, flat bottoms and fit the surface burners being used?

See the Cooking Guide for more information on cooking problems and how to solve them.

**If You Need Service Or Assistance
Continued**

2. If you need assistance* ...

Call Whirlpool Consumer Assistance Center telephone number. Dial free from anywhere in the U.S.:

1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. Donald Skinner
Director of Consumer Relations
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

3. If you need service* ...



Whirlpool has a nationwide network of authorized WhirlpoolSM service companies. Whirlpool service technicians are trained to fulfill the product warranty

and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD -
MAJOR - SERVICE & REPAIR

ELECTRICAL APPLIANCES -
MAJOR - REPAIRING & PARTS

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
AUTHORIZED WHIRLPOOL SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple 900-0000

4. If you need FSP* replacement parts* ...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 above or call the Whirlpool Consumer Assistance Center number in Step 2.

5. If you are not satisfied with how the problem was solved* ...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer or Whirlpool have failed to resolve your problem.
Major Appliance Consumer Action Panel
20 North Wacker Drive
Chicago, IL 60606
- MACAP will in turn inform us of your action.

* When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

Notes

IF YOU NEED SERVICE OR ASSISTANCE

Notes

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper appears to be a standard notebook page or a sheet of stationery. There is no handwriting or other markings on the page.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WHIRLPOOL®

Gas Cooking Product Warranty

GR002

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool® service company.
WHIRLPOOL WILL NOT PAY FOR	
A. Service calls to: <ol style="list-style-type: none">1. Correct the installation of the cooking product.2. Instruct you how to use the cooking product.3. Replace house fuses or correct house wiring or plumbing.4. Replace owner accessible light bulbs. B. Repairs when the cooking product is used in other than normal, single-family household use. C. Pick-up and delivery. This product is designed to be repaired in the home. D. Damage to the cooking product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our Consumer Assistance Center telephone number, 1-800-253-1301, from anywhere in the U.S.

® Registered Trademark/SM Service Mark of Whirlpool Corporation